
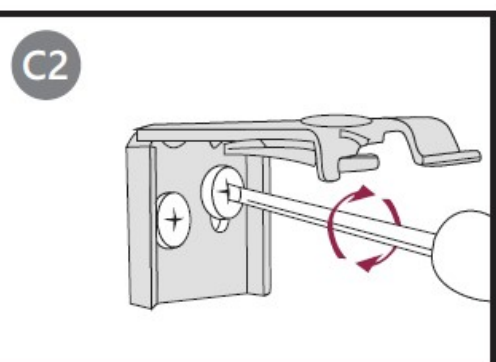
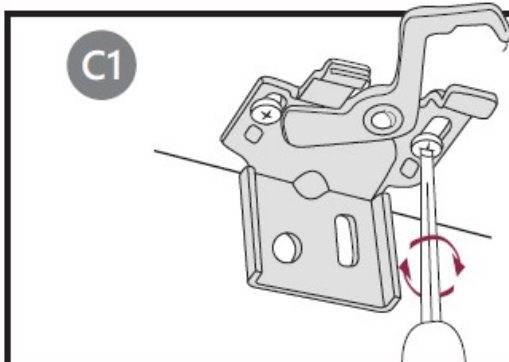
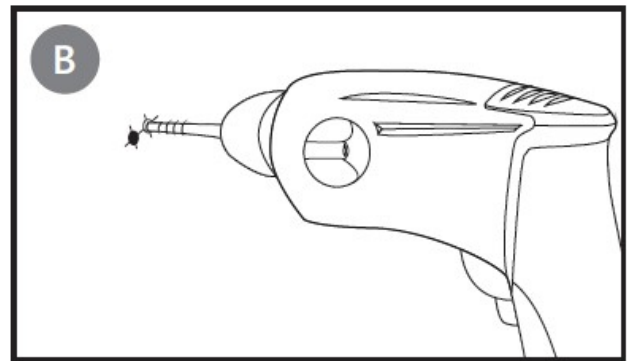


Installation of Roller Blind with Cassette Mechanism

Wall or Ceiling Installation

1. Installing the brackets





Carefully measure and mark the drilling points for the screws on the wall or ceiling (Fig. A). Drill holes for the screws. Depending on the wall or ceiling type, suitable wall plugs may be required (Fig. B). Fix the brackets to the wall (Fig. C2) or to the ceiling (Fig. C1).

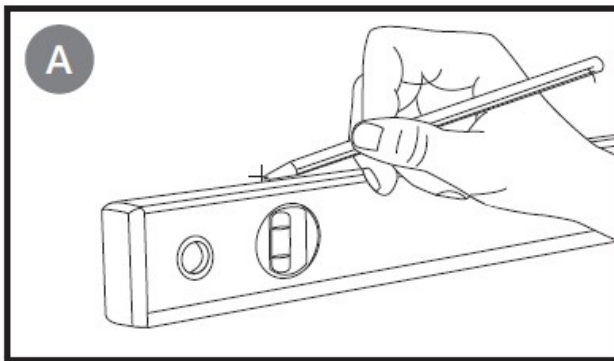

2. Fitting the cassette onto the brackets

Move the latches aside (Fig. D). Place the cassette onto the brackets. Position it from above and gently press it towards the wall (Fig. E). Secure the latches (Fig. F).





Correctly fitted blind shown in Fig. G.

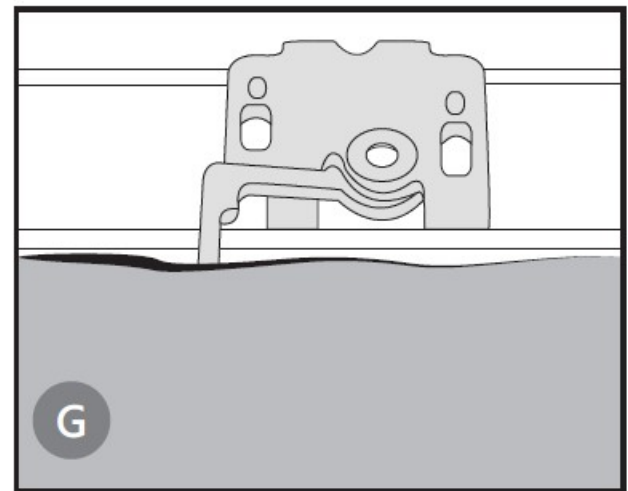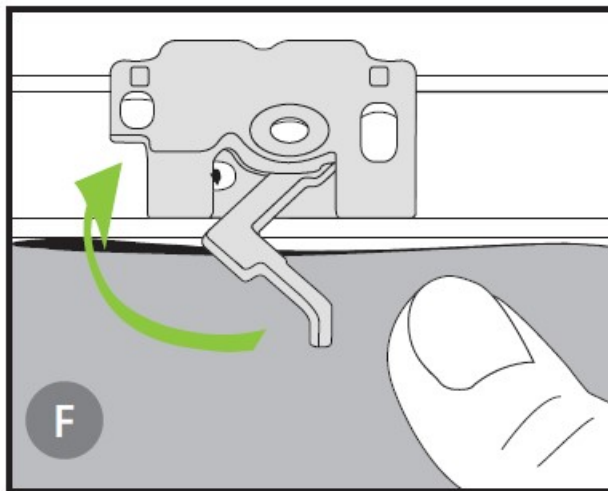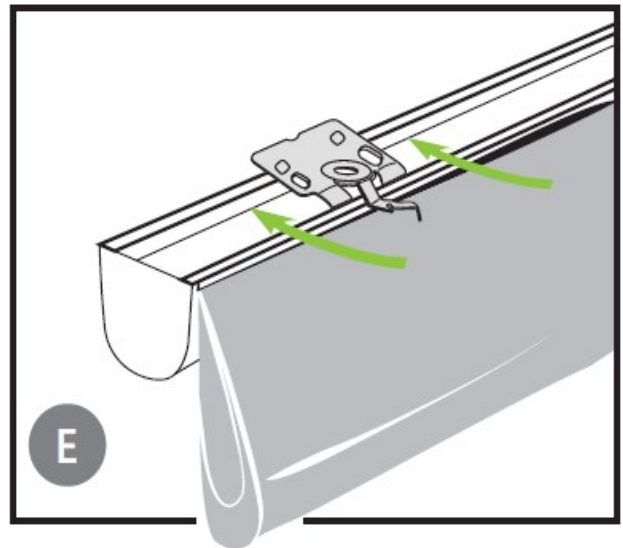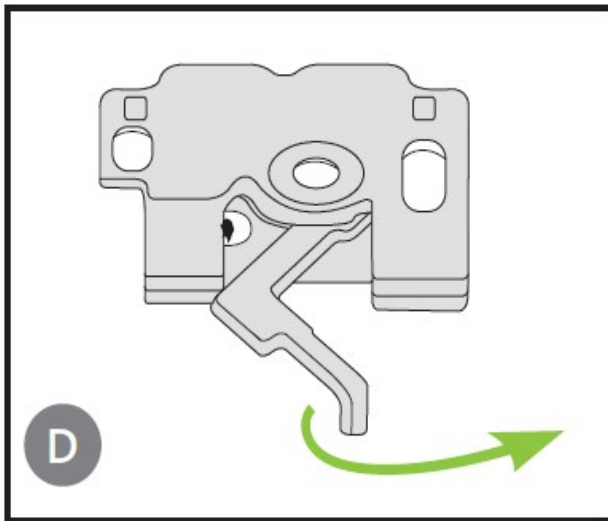

3. Fixing the chain tensioner

To prevent the chain from hanging loosely beside the window, we recommend installing the chain tensioner included in the set.

It may be fixed using screws (H) or adhesive tape (I).

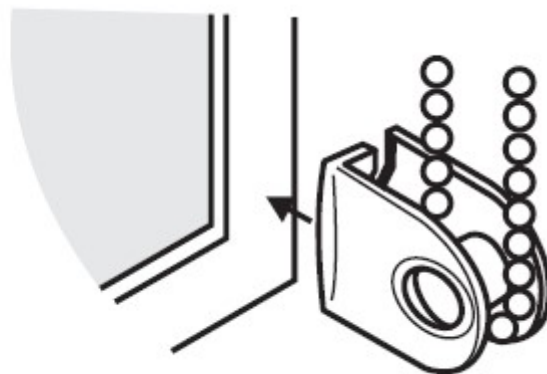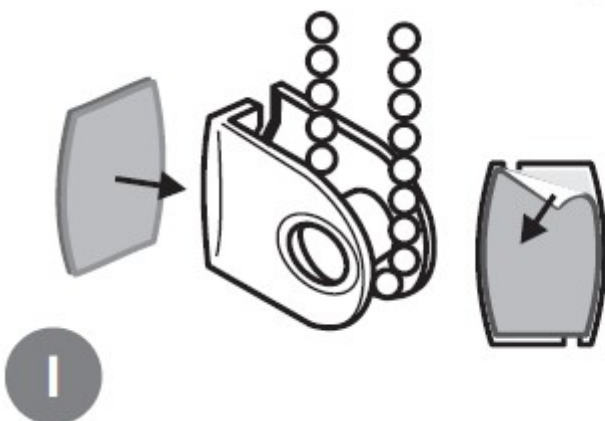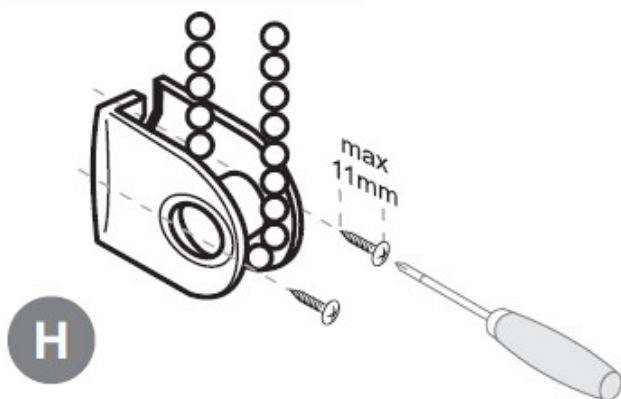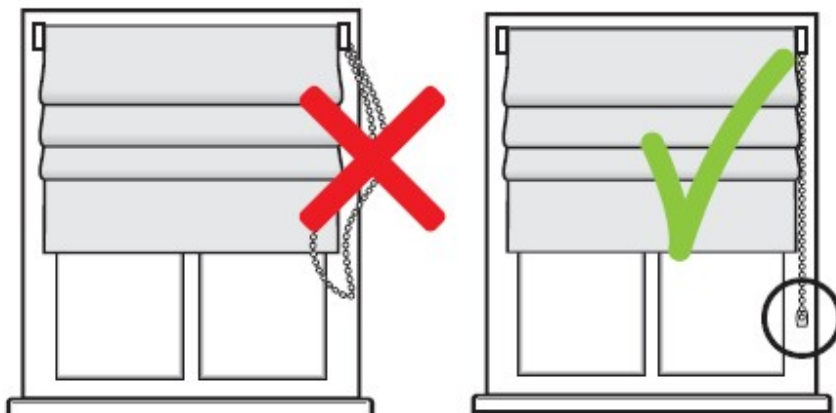


4. Cleaning the blind fabric

Remove the blind from the cassette. Pull the cords out of the bottom cord retainers (weights) with a firm movement, leaving the knots in place. Remove the horizontal stiffening rods and the bottom rail. Detach the metal cassette with the mechanism from the fabric (attached with hook-and-loop tape).


Wash the fabric only, following the laundry symbols shown on the care label.

OUR TIP: Before removing the cords, take photos of their arrangement. This will help you re-thread them correctly after washing.

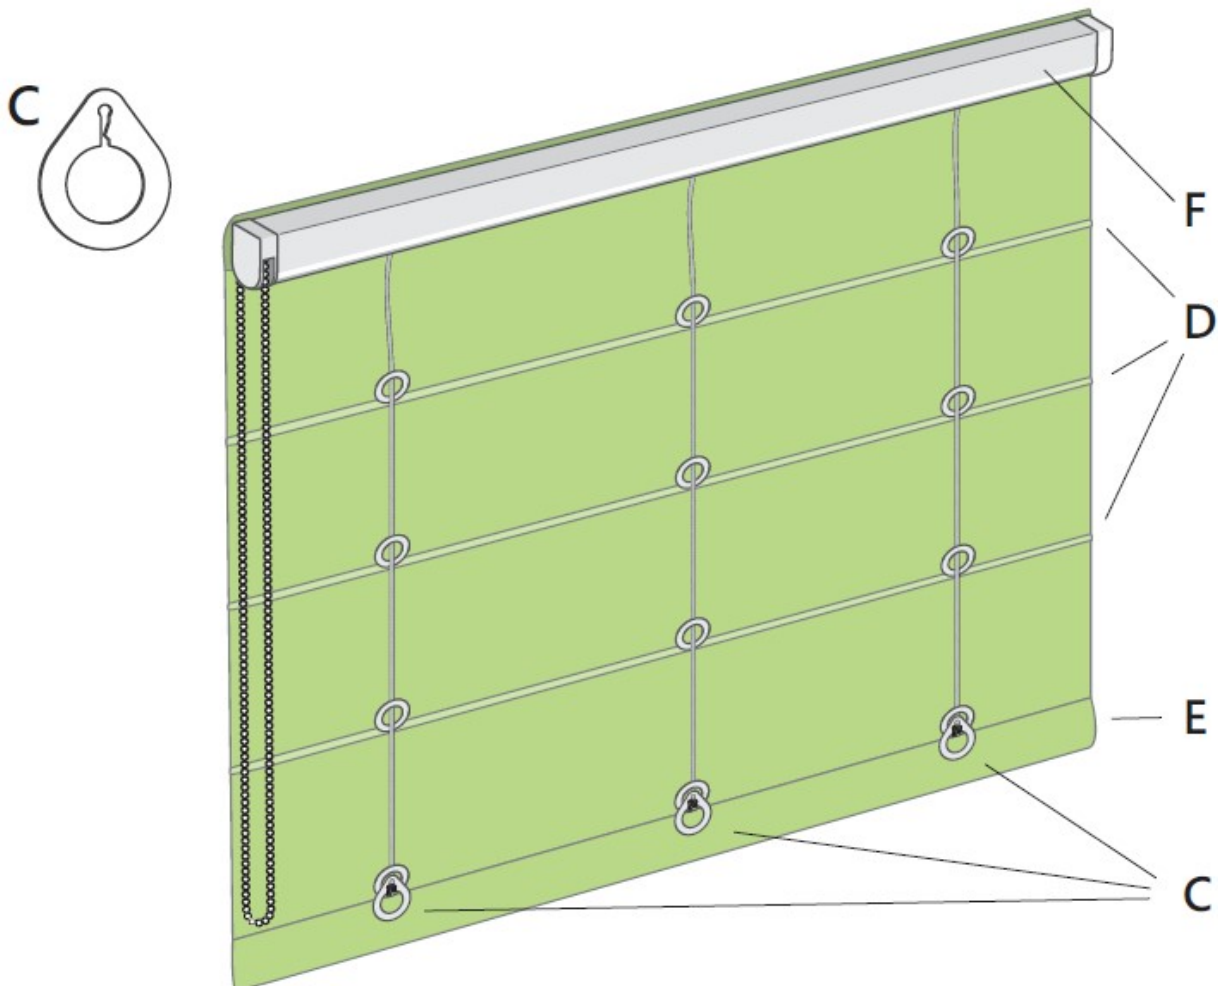


Non-invasive Installation on the Window Sash


1. Using screws and rectangular nuts, attach the blind brackets (A) to the window-sash mounting brackets (B). If the window has a trickle vent, position components (A) as close as possible to (B).

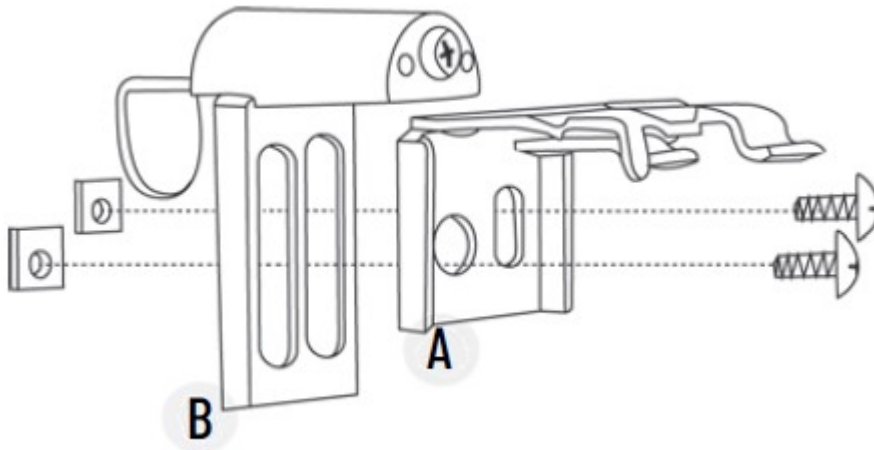


2. Place the assembled brackets onto the top edge of the window sash.

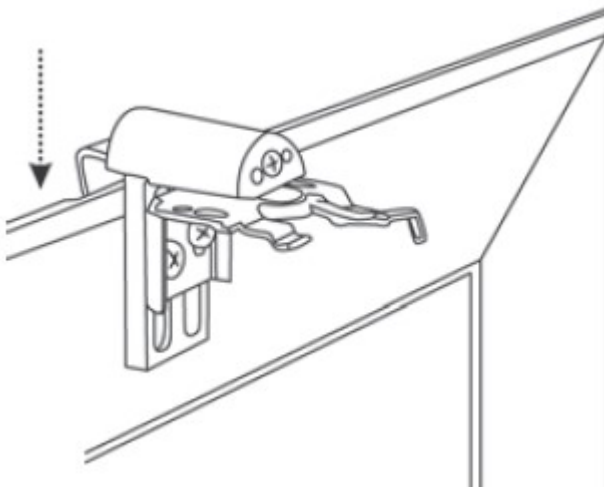


3. Carefully tighten the fitting using a screwdriver – do not overtighten.

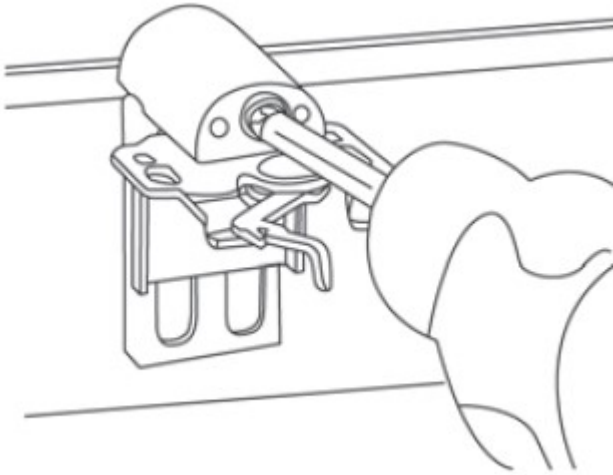

4. Fit the flexible cover cap.




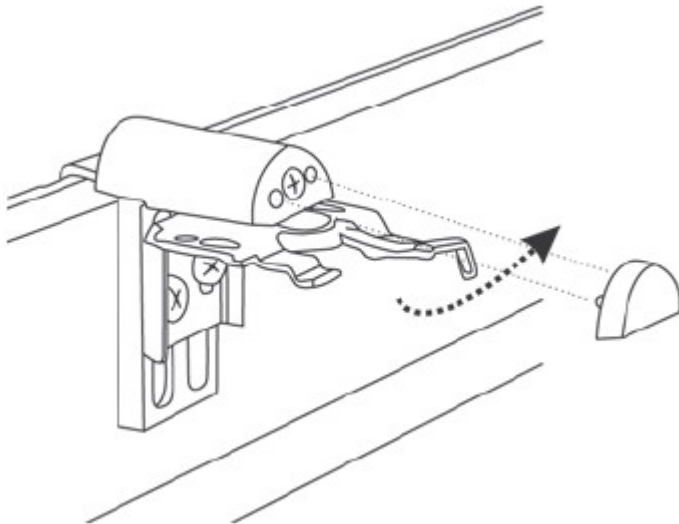


5. Position the cassette from above so the top rail locks behind the hooks of the brackets. Press the latch gently towards the window to secure.

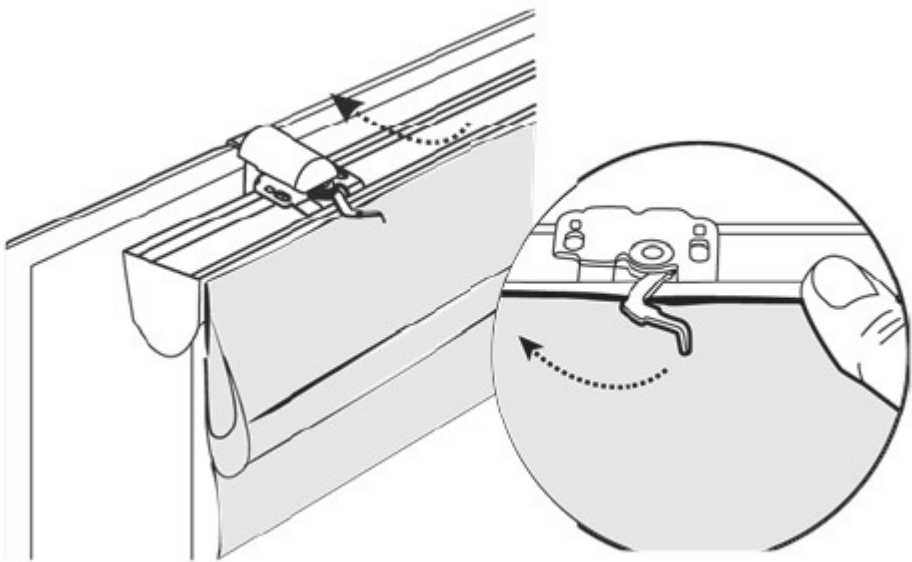

CHAIN TENSIONER SAFETY FIXING

To keep the chain safely in place, install the included chain tensioner using screws (H) or adhesive tape (I).

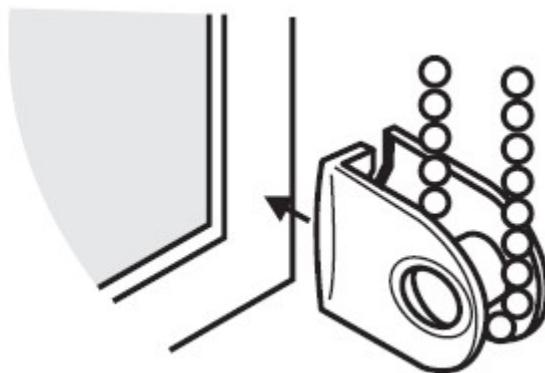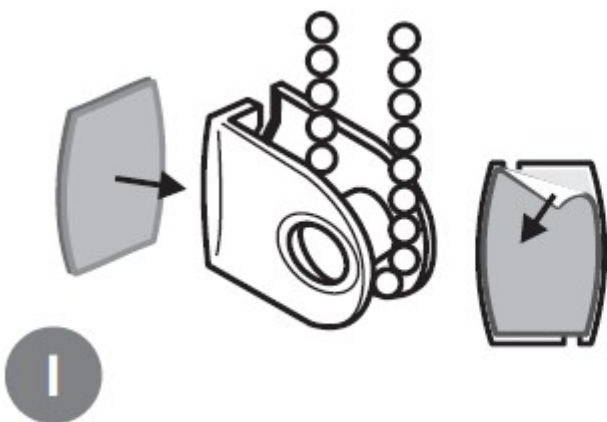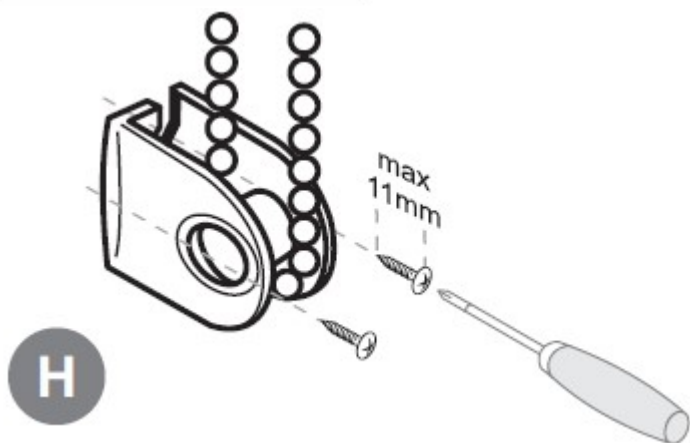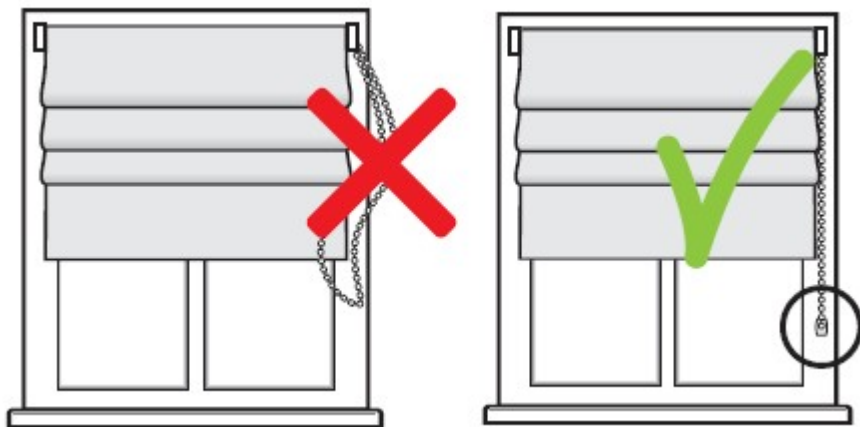

CAUTION!

Risk of strangulation!

Keep cords and chain loops out of the reach of small children!

Small parts included in the packaging!

These can be swallowed or cause choking hazards for children!

